

ASSEMBLY INSTRUCTION

ITEM NO:SH5591S Dining Chair with Uph Back & Seat



Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.

Δ

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

Δ

Hardware may loosen over time .Periodically check to make sure all connections are tight. Re-tighten if necessary.

PARTS LIST					
NO.	SKETCH	DESCRIPTION	Q'TY		
A		CHAIR BACK	1PC		
В		CUSHION SEAT	1PC		
С		FRONT LEG	2PCS		


	HARDWARE LIST						
NO.	DESCRIPTION	SIZE	SKETCH	Q'TY			
1	BOLT	Ø5/16" x 1-1/2"		2PCS			
2	BOLT	Ø5/16" x 2"	()	4PCS			
3	BOLT	Ø5/16" x 3"		4PCS			
4	LOCK WASHER	Ø5/16"	0	10PCS			
5	FLAT WASHER	Ø5/16" x 3/4"	0	10PCS			
6	ALLEN KEY	1/6" x 2-1/4"		1PC			

^{**}ABOVE HARDWARE ARE PACKED IN #SH5591S FOR ASSEMBLY.


^{**}SCREW DRIVER(NOT PROVIDED)





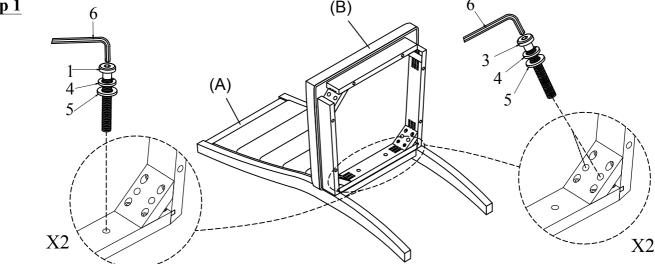

Step 2

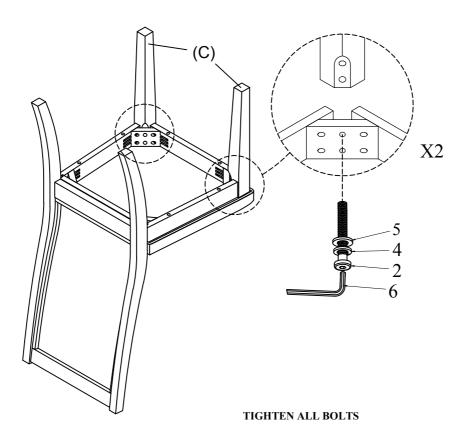

Step 3



DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED. MADE IN VIETNAM