
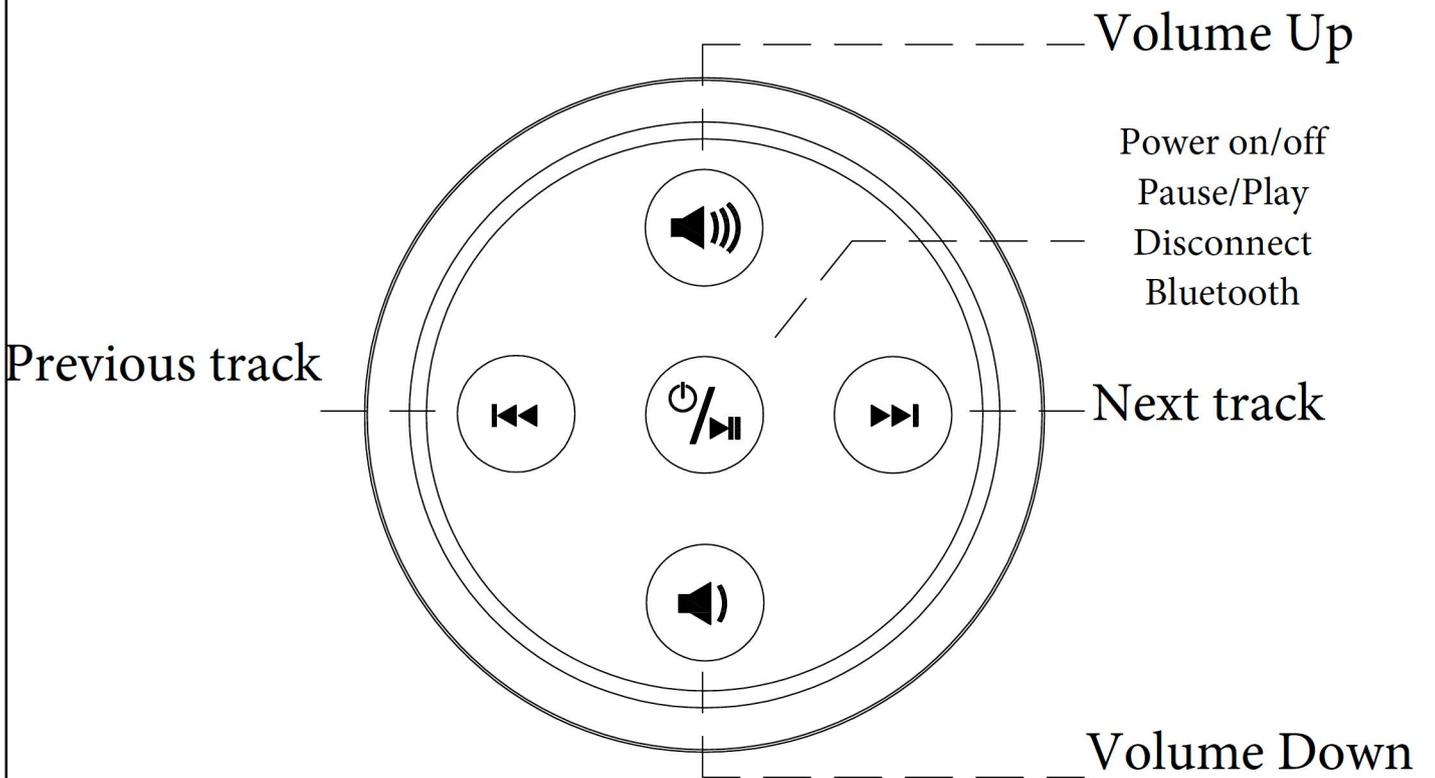


Remo1E User Manual

● Assembly drawing

Bluetooth name: REMO1

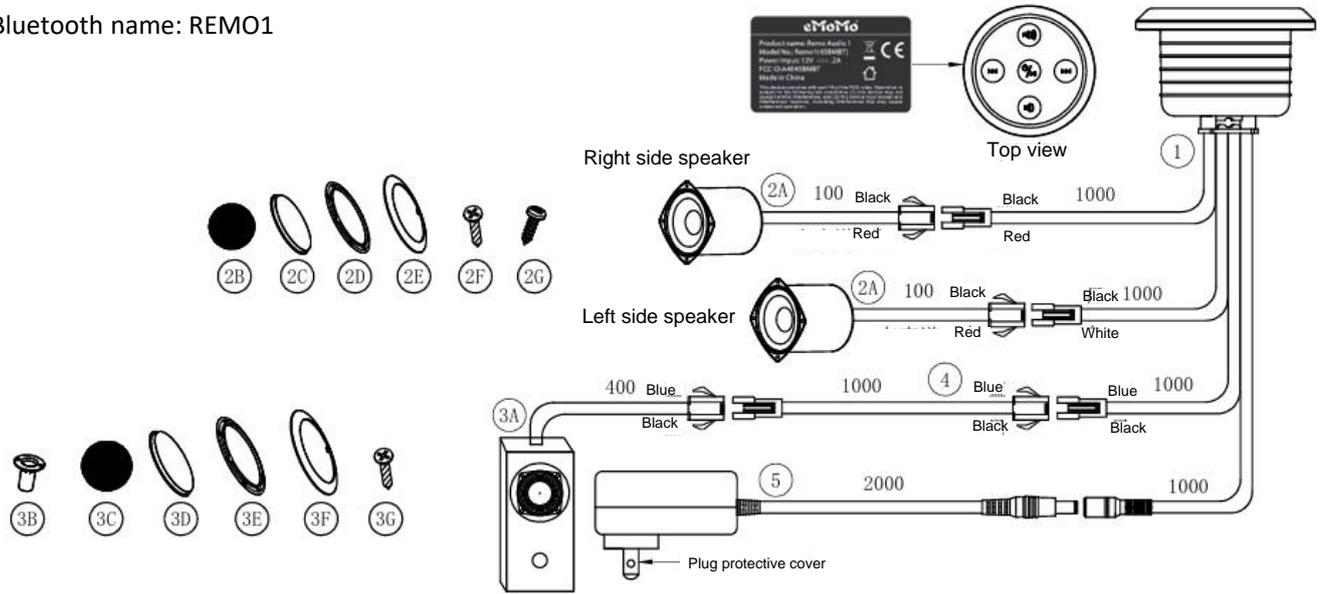

● Button Description

Button	Button Name	Function
	Power on/off Pause/Play Disconnect Bluetooth	Press and hold for 3 seconds to turn on the device; press and hold for 5 seconds again to turn off the device. Short press: Pause/play Long press for 3S after powering on: Disconnect Bluetooth connection
	Volume Up	Short press: volume increases step by step Long press: The volume continues to increase. When the volume is at maximum, the voice prompt is: du du
	Volume Down	Short press: volume decreases step by step Long press: Volume down continuously
	Previous track	Short press: Go to the previous track
	Next track	Short press: Go to next track

● Instructions

Connect the product according to the assembly diagram and power on.

A Bluetooth speaker function

1, Long press  for 3 seconds to turn on the device, accompanied by a prompt tone, the

Bluetooth indicator light  flashes slowly in blue, and a voice prompt appears: Bluetooth mode. The product enters the waiting state for pairing. If pairing fails, the Bluetooth indicator light flashes for 30 seconds and then turns off. The product is in the waiting state

for pairing. Long press the power button  for 5 seconds again to turn off the device, accompanied by a prompt tone.

2, Turn on the Bluetooth function on your phone, search for the Bluetooth name " REM01", and pair. After pairing is successful,  the blue light will be on and the voice prompt "Connected" will be heard.

3, Open tracks on your phone and play music. You can control the music on your phone or on the Rem01E operation panel to control the previous track, next track, volume down, volume up, play/pause, etc.

4, Press and hold  for 3 seconds to disconnect the Bluetooth connection. The Bluetooth indicator light  flashes slowly and a voice prompt appears: Disconnect the Bluetooth connection. The phone needs to be paired and connected again before music can be played.

● Product Specifications

Power Input	DC12V2A
Speaker Output	7.5W*2

● Common troubleshooting

Fault	Possible causes and solutions
Unable to power on	1. No power connection. 2. The wire is disconnected or the plug is not fully inserted. 3. The connected socket is faulty.
No sound	1. The extension cable of the speaker is

	<p>disconnected. Please check all connections or reconnect them.</p> <p>2. The product is in pause mode, please press the  button briefly.</p> <p>3. The volume is at minimum. Please press and hold  button .</p>
Bluetooth cannot connect	<p>1. If the device has been connected to another Bluetooth device, press and hold  for 3 seconds to exit the Bluetooth of the other device.</p> <p>2. Beyond the effective range. Please do not connect beyond 8M of this product. Do not try to connect through obstacles.</p>
The music is played by another device	<p>As Bluetooth has a back-connection function, please check whether the phone is paired with two Bluetooth devices at the same time, cancel the pairing of one of them, and click the play button on the phone.</p>