

ASSEMBLY INSTRUCTION ITEM NO:SH1171DB-24/ SH1171LB-24 COUNTER HEIGHT CHAIR

Thank you for purchasing this product. Please take time to read and follow instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in packing matterials. If you do not have all parts listed, call us and they be sent to you immediately



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

	PARTS LIST				
NO.	SKETCH	DESCRIPTION			
А		CHAIR BACK	1PC		
В	\bigcirc	SEAT FRAME WITH CUSHION	1PC		
С		LEFT FRONT LEG	1PC		
D		RIGHT FRONT LEG	1PC		
Е	/	LEFT STRETCHER	1PC		
F		RIGHT STRETCHER	1PC		
G		FRONT STRETCHER	1PC		

HARDWARE LIST						
NO.	DESCRIPTION	SIZE	SKETCH	Q'TY		
1	BOLT	Ø5/16" x 1-1/2"		2PCS		
2	BOLT	Ø5/16" x 2-3/8"		4PCS		
3	BOLT	Ø5/16" x 3"		4PCS		
4	LOCK WASHER	Ø5/16"	Ø	10PCS		
5	FLAT WASHER	Ø5/16"x 3/4"	0	10PCS		
6	ALLEN KEY	1/6" x 2-1/4"		1PC		
7	WOOD SCREW	#4*45mm		6PCS		
8	WOOD DOWEL	Ø10 x 30mm	STILL	1PC		

**ABOVE HARDWARE ARE PACKED IN # SH1171DB-24/SH1171LB-24 FOR ASSEMBLY **SCREW DRIVER(NOT PROVIDED)



