


ASSEMBLY INSTRUCTION

ITEM NO: 9688NBE-CR / CORNER SEAT

LEGS, HARDWARE, BACK CUSHION ARE STORED IN THE BOTTOM OF THE SEAT, PLEASE TAKE OUT FOR ASSEMBLY.

NO.	PARTS LIST	QTY	DESCRIPTION
А		1	Seat Frame
В	\Diamond	1	Seat Cushion
С		2	Headrest
D	38"*17"	1	Back Cushion
Е	31-1/2"*17"	1	Back Cushion
F	17"*17"	2	Pillow
G	Ø3-1/8"*5-1/8"	4	Wooden Leg
Н		4	Washer
I		2	Connector

STEP 1:

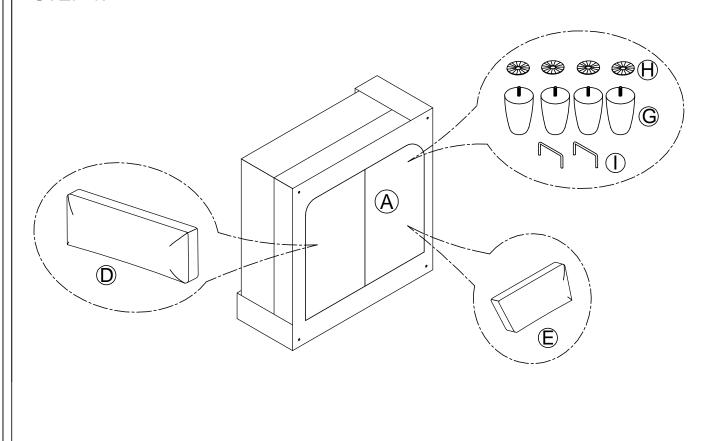


MADE IN VIETNAM Page: 1/3




ASSEMBLY INSTRUCTION


ITEM NO: 9688NBE-CR / CORNER SEAT

STEP 2:

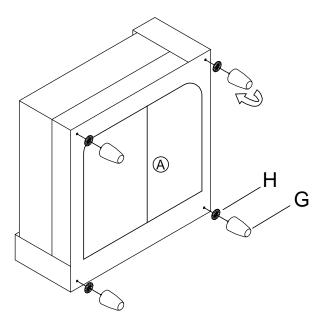

STEP 3 (Completed):

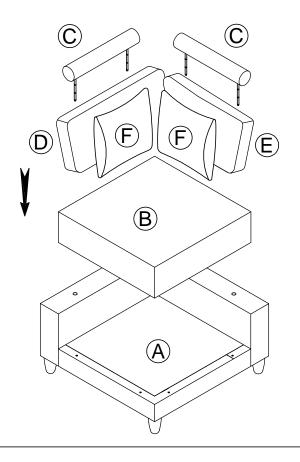

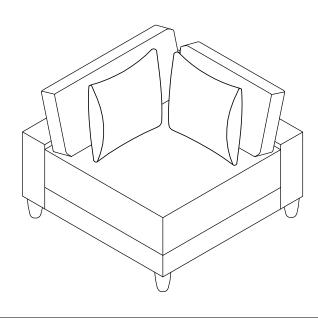

CARE INSTRUCTION FOR FABRIC FURNITURE

In order to maintain the original appearance of your fabric funiture, please follow below simple care procedures.

°Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage fabric.

°Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

Hardware may loosen over time. Periodically check to make sure all connections are tight.Re-tighten if necessary.

MADE IN VIETNAM Page: 2/3





ASSEMBLY INSTRUCTION

ITEM NO: 9688NBE

NO.	PARTS LIST	QTY	DESCRIPTION
A		2	9688NBE-AC
В		2	9688NBE-CR
С		1	9688NBE-4



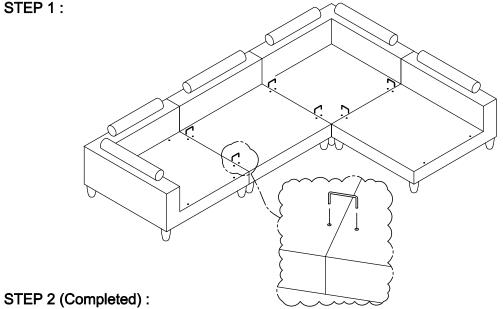

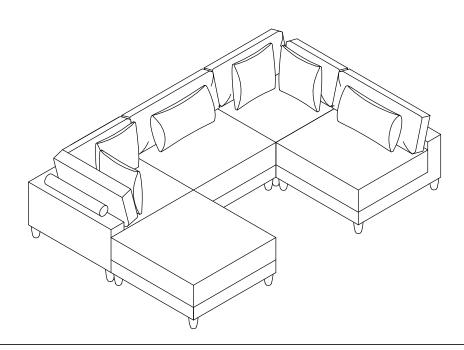

MADE IN VIETNAM Page: 3/3