


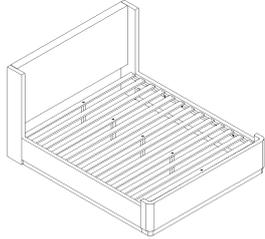

ASSEMBLING INSTRUCTIONS

ITEM NO.: 2396BEF-1 / 2396LGF-1 Full Headboard
 2396BE-1 / 2396LG-1 Queen Headboard
 2396BEF-3 / 2396LGF-3 Full Footboard with Rails & Slats
 2396BE-3 / 2396LG-3 Queen Footboard with Rails & Slats

H O M E E L E G A N C E



Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they be sent to you immediately.

⚠ It is recommended to install protective pads under all legs and support to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit Indentation and prevent discoloration if placing on carpet.

2396BEF-1 / 2396LGF-1 / 2396BE-1 / 2396LG-1 PARTS LISTS			
NO.	SKETCH	DESCRIPTION	QTY
A		Headboard	1 PC
B		LSF Post Leg	1 PC
C		RSF Post Leg	1 PC

2396BEF-3 / 2396LGF-3 / 2396BE-3 / 2396LG-3 PARTS LISTS			
NO.	SKETCH	DESCRIPTION	QTY
D		RSF Side Rail	1 PC
E		LSF Side Rail	1 PC
F		Footboard	1 PC
G		Slat Support Leg	5 PCS
H		Slat Roll	1Roll/ 13 PCS
I		Cleat	2 PCS

2396BEF-1 / 2396LGF-1 / 2396BE-1 / 2396LG-1 HARDWARE LISTS				
NO.	SKETCH	DESCRIPTION	SIZE	QTY
1		Bolt	Ø5/16" x 2-3/16"	6 PCS
2		Spring Washer	Ø5/16"	6 PCS
3		Flat Washer	Ø5/16"	6 PCS
12		Allen Key	#4 x 4"	1 PC

2396BEF-3 / 2396LGF-3 / 2396BE-3 / 2396LG-3 HARDWARE LISTS				
NO.	SKETCH	DESCRIPTION	SIZE	QTY
4		Full - Thread Bolt	Ø5/16" x 3-5/32"	8 PCS
5		Curve Washer	Ø5/16" x 1-3/16"	8 PCS
6		Hex Nut	Ø5/16"	8 PCS
7		Bolt	Ø1/4" x 2"	10 PCS
8		Spring Washer	Ø1/4"	10 PCS
9		Flat Washer	Ø1/4"	10 PCS
10		Screw	#4 x 1-1/4"	26 PCS
11		Screw	#4 x 1-3/4"	4 PCS
12		Allen Key	#4 x 4"	1 PC
13		Open Wrench		1 PC



**Screwdriver
(Not Provided)**


* DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED




ASSEMBLING INSTRUCTIONS

ITEM NO.: 2396BEF-1 / 2396LGF-1 Full Headboard
2396BE-1 / 2396LG-1 Queen Headboard
2396BEF-3 / 2396LGF-3 Full Footboard with Rails & Slats
2396BE-3 / 2396LG-3 Queen Footboard with Rails & Slats

STEP 1:

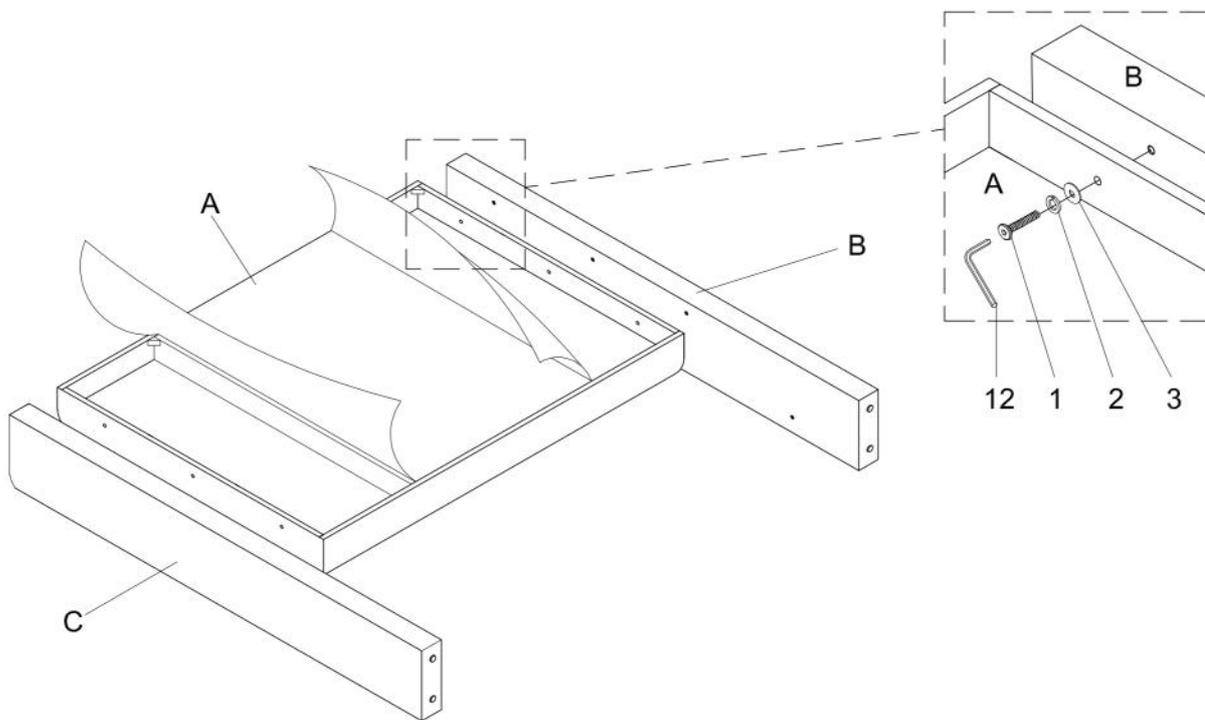

STEP 2:

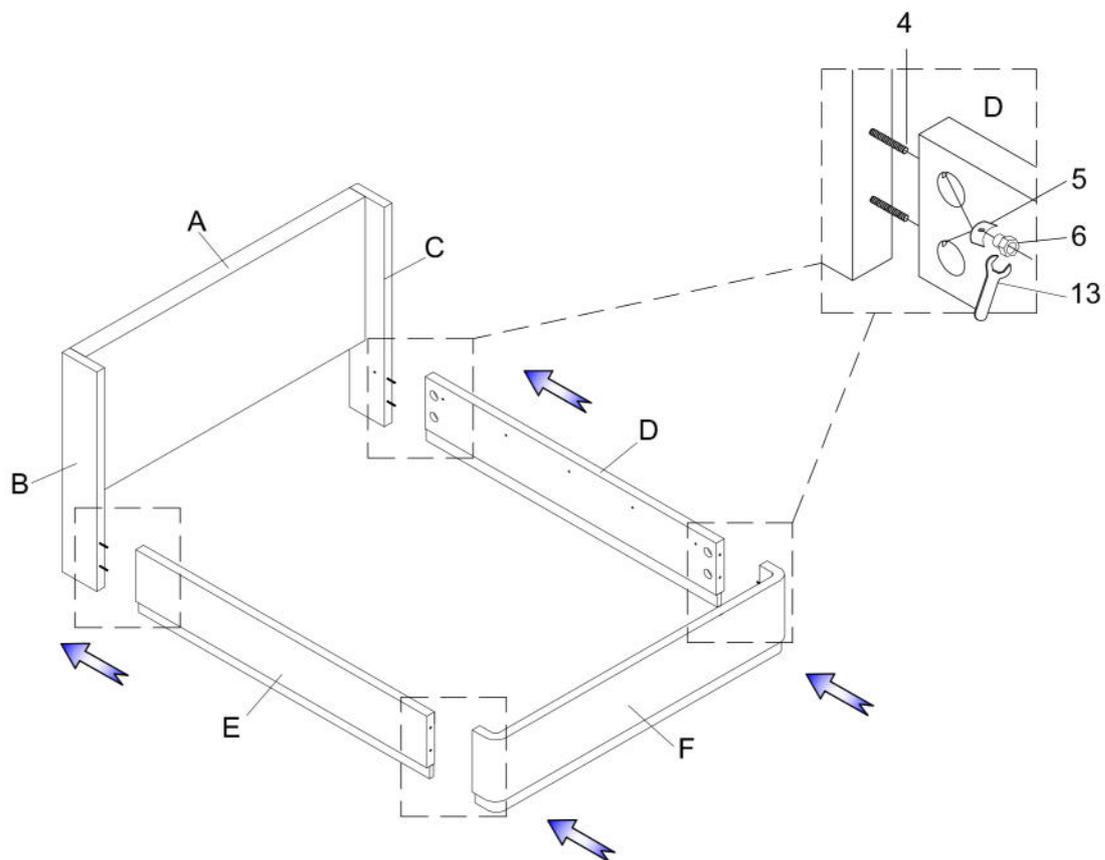





ASSEMBLING INSTRUCTIONS

ITEM NO.: 2396BEF-1 / 2396LGF-1 Full Headboard
2396BE-1 / 2396LG-1 Queen Headboard
2396BEF-3 / 2396LGF-3 Full Footboard with Rails & Slats
2396BE-3 / 2396LG-3 Queen Footboard with Rails & Slats

STEP 3:

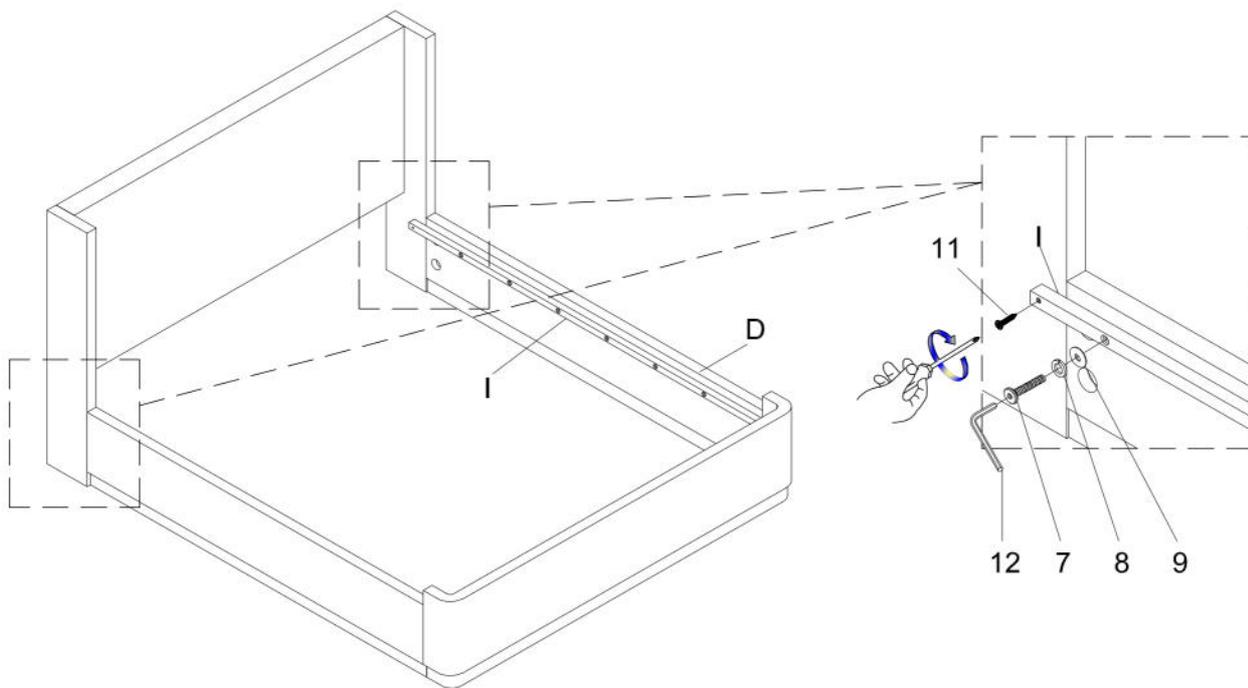

STEP 4:

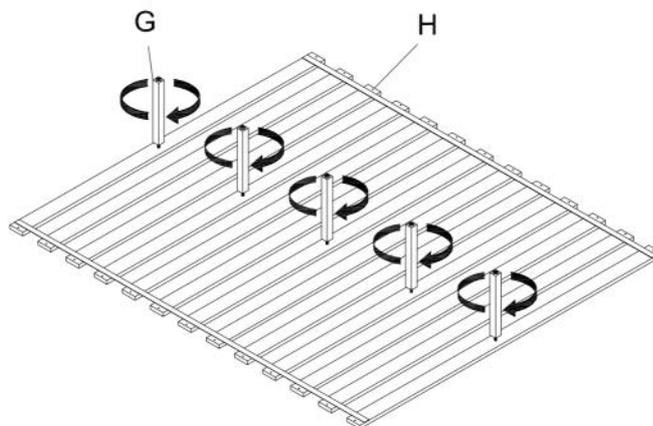




ASSEMBLING INSTRUCTIONS


H O M E E L E G A N C E

ITEM NO. | 2396BEF-1 / 2396LGF-1 Full Headboard
2396BE-1 / 2396LG-1 Queen Headboard
2396BEF-3 / 2396LGF-3 Full Footboard with Rails & Slats
2396BE-3 / 2396LG-3 Queen Footboard with Rails & Slats

STEP 5:

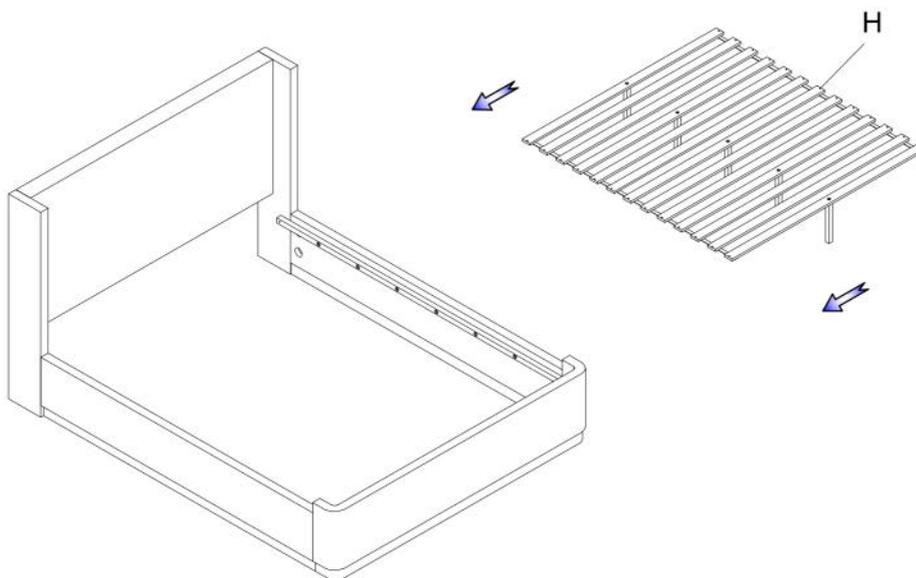


STEP 6:

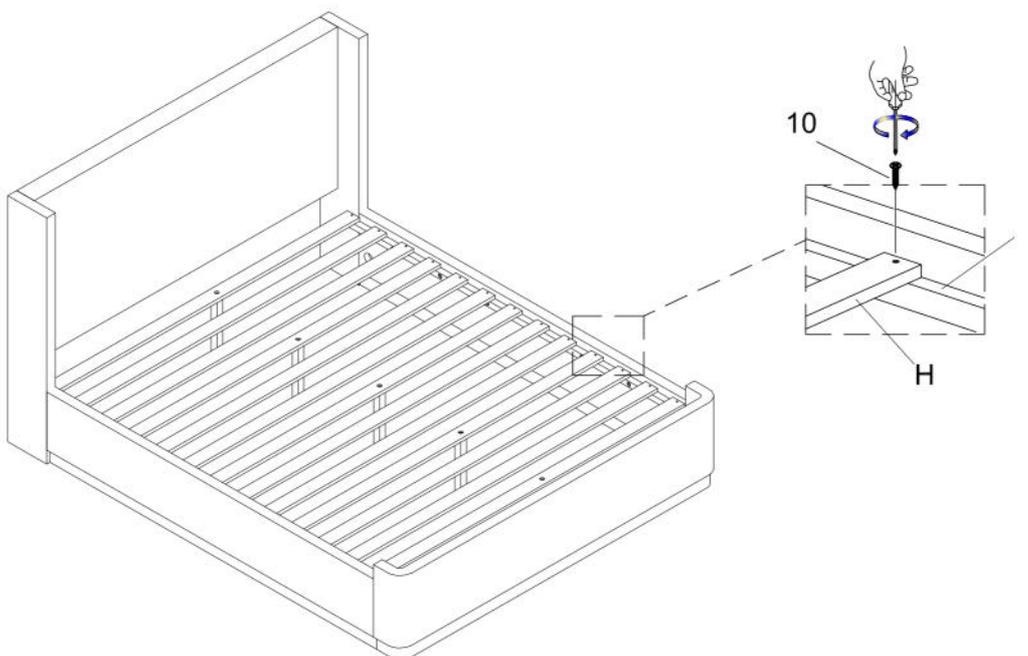

ASSEMBLING INSTRUCTIONS

ITEM NO. | 2396BEF-1 / 2396LGF-1 Full Headboard
2396BE-1 / 2396LG-1 Queen Headboard
2396BEF-3 / 2396LGF-3 Full Footboard with Rails & Slats
2396BE-3 / 2396LG-3 Queen Footboard with Rails & Slats

COMPLETED

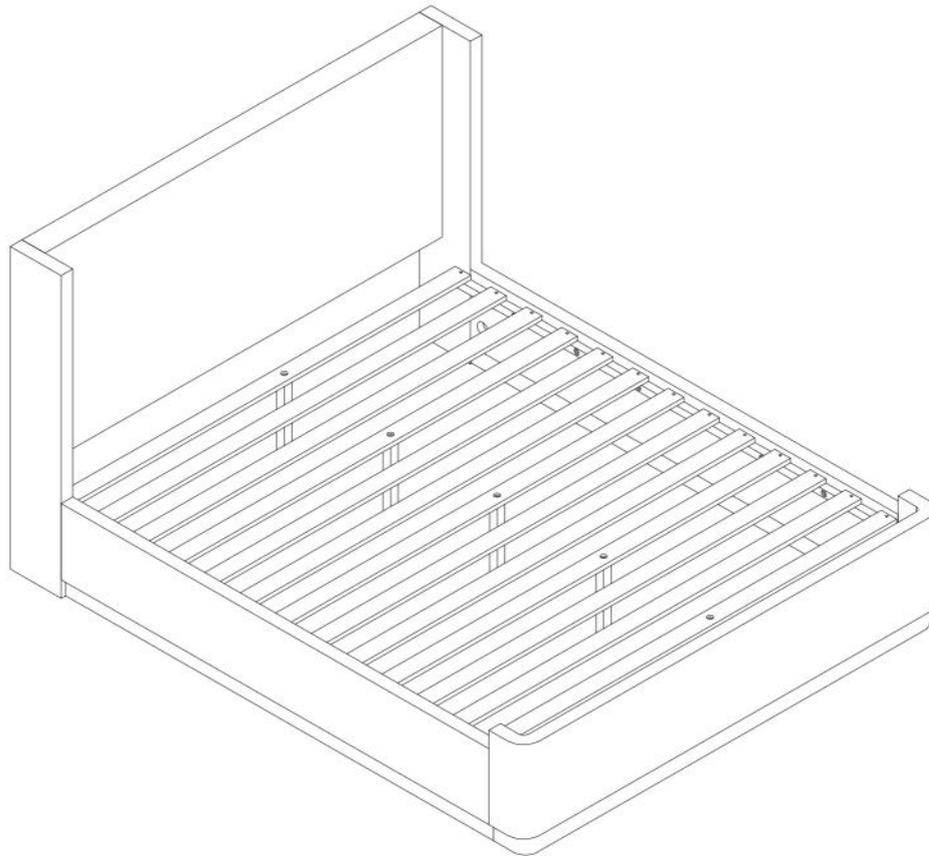

Care Instruction for Boucle Furniture

In order to maintain the original appearance of your boucle furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage boucle.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary

 For item use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.