ASSEMBLY INSTRUCTION

ITEM NO: SH1182ESO-24 COUNTER HEIGHT CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PARTS LIST				HARDWARE LIST				
NO.	Description	Sketch	Q'ty	NO.	Description	Sketch	Size	Q'ty
A	CHAIR BACK		2 PCS	1	SHORT BOLT	() <u>Barriero</u>	5/16"-13 x 1 1/2"	6 PCS
				2	MEDIUM BOLT		5/16"-13 x 2"	8 PCS
В	CUSHION SEAT		2 PCS	3	LONG BOLT		5/16"-13 x 3"	8 PCS
		Ŷ		4	SPRING WASHER	<u></u>	5/16"ID x 3/8"OD x 1/16"TK	22 PCS
С	LEFT FRONT LEG		2 PCS	5	FLAT WASHER		5/16"ID x 3/4"OD x 1/16"TK	22 PCS
				6	WOOD SCREW	(%)	# 8 x 1 3/4"	12 PCS
D	RIGHT FRONT LEG		2 PCS	7	ALLEN KEY		1/6"	1 PC
Е	FRONT STRETCHER		2 PCS					
F	LEFT SIDE STRETCHER		2 PCS					

2 PCS


STEP 1

G


RIGHT SIDE STRETCHER

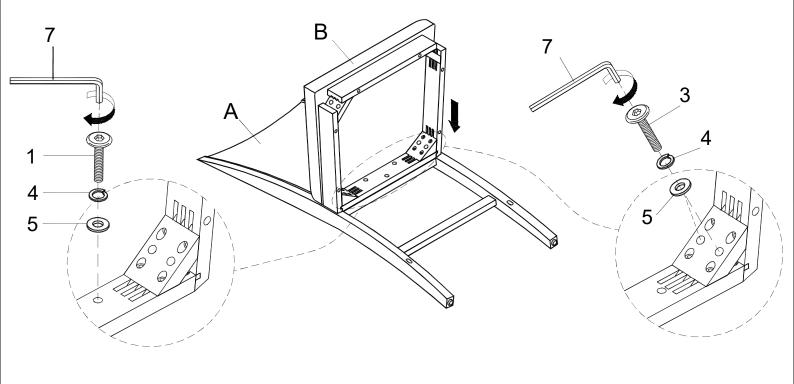


STEP 2

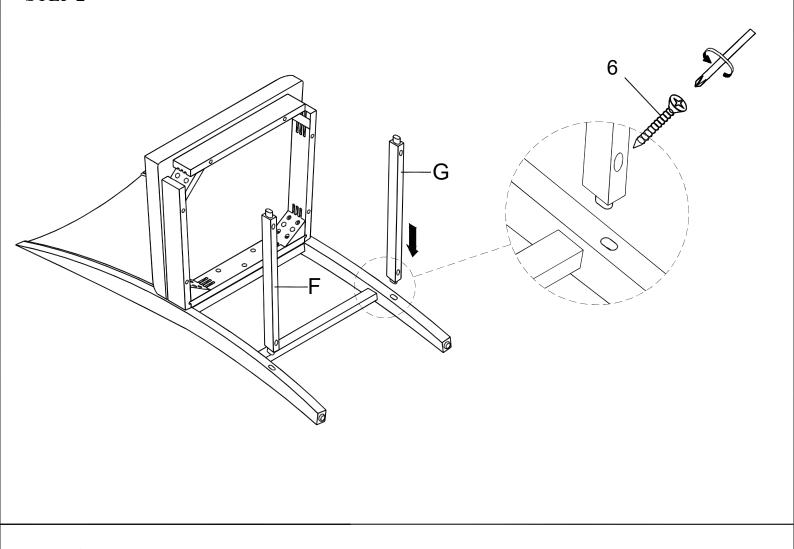

STEP 3

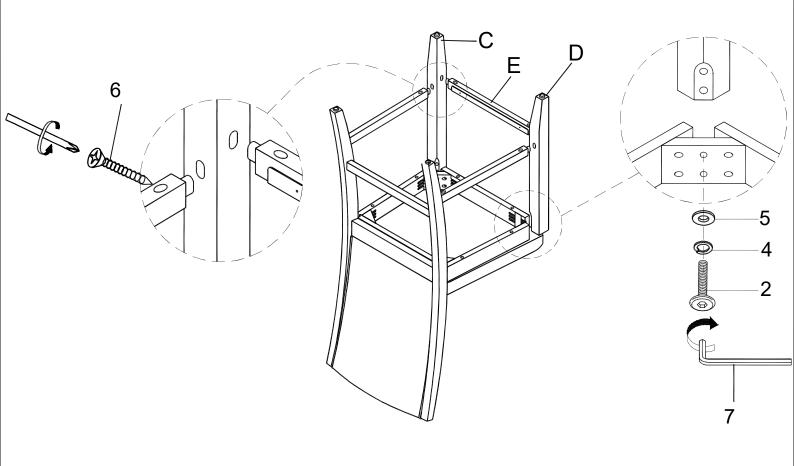

COMPLETED

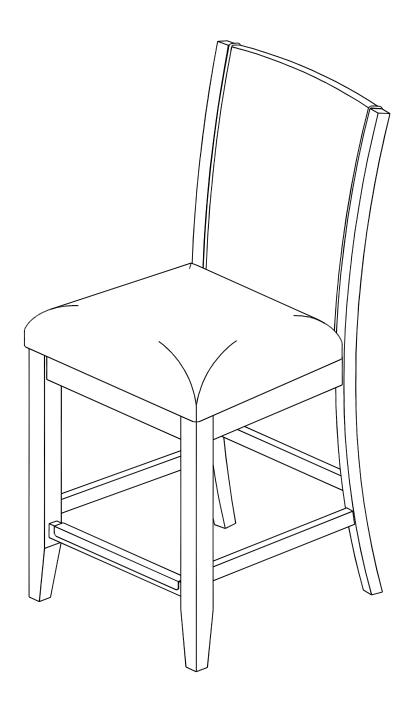

DO NOT TIGHTEN BOLS UNITL COMPLETELY ASSEMBLED.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

PAGE 3 OF 3 MADE IN VIETNAM