




## ASSEMBLY INSTRUCTION

### ITEM NO:SH1171DBS/SH1171LBS

### SIDE CHAIR

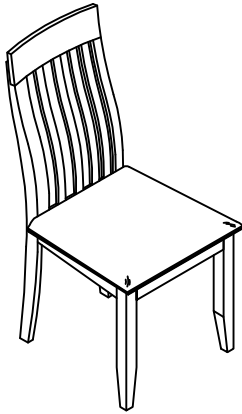

Thank you for purchasing this product. Please take time to read and follow instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in packing materials. If you do not have all parts listed, call us and they be sent to you immediately



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

PARTS LIST


NO.	SKETCH	DESCRIPTION	Q'TY
A		CHAIR BACK	1PC
B		SEAT FRAME WITH CUSHION	1PC
C		LEFT FRONT LEG	2PCS

HARDWARE LIST

NO.	DESCRIPTION	SIZE	SKETCH	Q'TY
1	BOLT	Ø1/4" x 1-1/2"		2PCS
2	BOLT	Ø1/4" x 2-3/8"		4PCS
3	BOLT	Ø1/4" x 3"		4PCS
4	LOCK WASHER	Ø1/4"		10PCS
5	FLAT WASHER	Ø1/4"x 3/4"		10PCS
6	ALLEN KEY	1/6" x 2-1/4"		1PC
7	WOOD DOWEL	Ø10 x 30mm		1PC


\*\*ABOVE HARDWARE ARE PACKED IN # SH1171DBS/SH1171LBS FOR ASSEMBLY

### Step 1

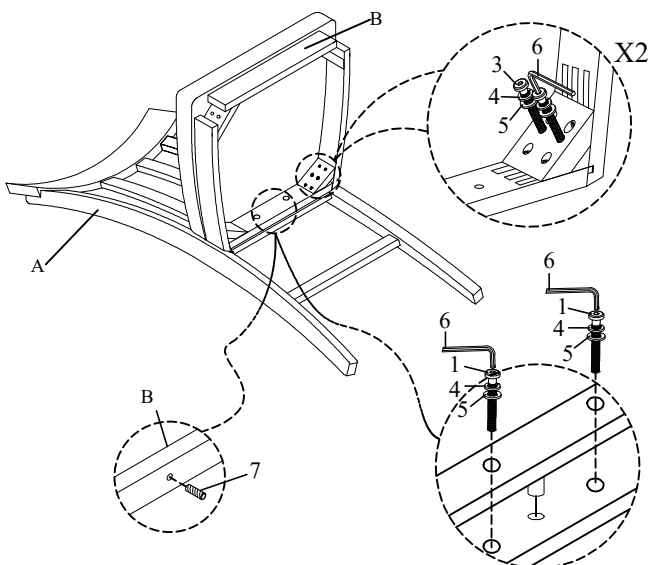


DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.  
MADE IN VIETNAM

### Step 2

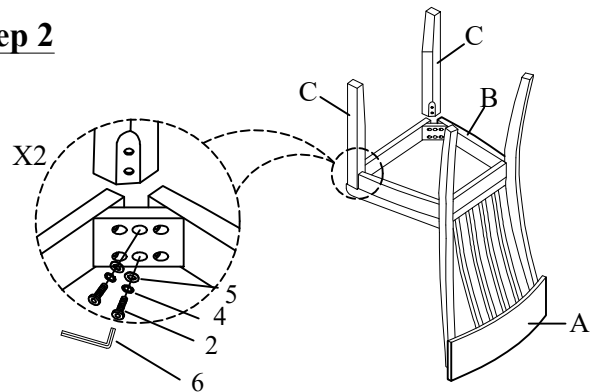

### Step 3

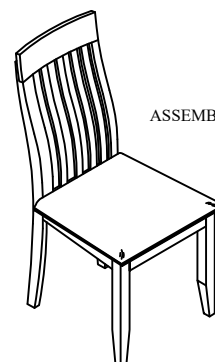

ASSEMBLY COMPLETED